



ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D	ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	04025	Hair Guard Screw	2	15	05009	Hanger Hook	1
2	15002	Hair Guard - Edjer (UL)	1	16	15000	Lower Case	1
	15061	Hair Guard - T-Edjer (UL)	1	17	15014	Switch Contact Spring	1
	15065	Hair Guard (CSA)	1	18	S15867	Switch Button	1
3	15023	Cover Screw	1	19	15029	Terminal Screw	2
4	04023	Cover Screw	1	20	15024	Field Screw	2
5	15001	Upper Cover	1	21	15013	Cover Screw Pad	1
6	S15511	Arm. Assy 2Wire (includes items 8, 9, & 10)	1	22	15071	Cover Screw Pad Screw	1
7	S15537	Arm. Assy 3Wire (includes items 8, 9, & 10)	1	23	15046	Field Screw	1
8	15507	Tension Spring Assembly	1	24	04648	T-Guide Screw	2
9	15034	Tension Spring Pad	1	25	15093	T-Guide Washer	1
10	15028	Tension Spring Screw	2	26	15064	T-Guide	1
11	S15502	Field Core Assembly 2-Wire	1	27	32035	Lower Blade Screw	2
12	S15544	Field Core Assembly 3-Wire	1	28	01296	Lock Washer - 3-Wire Only	1
13	15771	Cord Set - 2-Wire	1	29	04229	Terminal Screw - 3-Wire Only	1
14	15536	Cord Set - 3-Wire	1	30	15080	ON/OFF Label - 3-wire Only	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of clipper/trimmer. For best performance, clipper/trimmer should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin 53177 U.S.A. Carefully pack and mail either insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.