



ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D	ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	64585	Battery Pack	1	18	64514	Motor Frame Clip	2
2	64556	Lower Housing	1	19	64528	Armature Assembly (Includes Item 20).	1
3	64848	Upper Housing	1	20	27251	Cam Assembly	1
4	64913	Drive Cap	1	21	64529	Magnetized Field Assembly.	1
5	64788	Switch Button Retainer.	1	22	15766	Blade Drive Screw	2
6	64902	Switch Button	1	23	22319	Blade Drive Assembly	1
7	64794	Switch Button Lock	1	24	21068	Large Bearing Mounting Ring	1
8	64527	Lock Ring	1	25	64027	Blade Guide	1
9	64508	Motor Battery Contacts	2	26	S64013	Tension Spring	1
10	64944	Rear Motor Frame	1	27	64139	Blade Screw	2
11	65013	Front Motor Frame	1	28	64003	Blade Bracket	1
12	21067	Small Bearing Mounting Ring	1	29	64533	O-Ring	1
13	64507	Switch	1	30	64606	Housing Screw	4
14	57993	Screw	2	31	S21743	Hinge Assy (Oster 76, 89 Blade Compatibility).	1
15	64503	Carbon Brush w/Shunt	2		S27091	Hinge Assy (Oster 10, 22 & 111 Blade Comp.).	1
16	64504	Brush Spring	2	32	27131	Blade Hinge Screw	2
17	64670	Brush Retainer Clip	2	33	64580	Complete Charger (UL)(Remailer)	1
					64677	Complete Charger Assy (CSA)	1

IMPORTANT INFORMATION!

When ordering repair parts, include part number, part name and model of clipper/trimmer. For best performance, clipper blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U. S. A. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.