



ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	32564	Switch Button	1
2	32588	Upper Housing Assembly (Edjer II)	1
	32587	Upper Housing Assembly (T-Edjer II)	1
	32999	Upper Housing Assembly (TS Salon T)	1
3	32098	Motor Assembly	1
4	29950	Switch	1
5	57834	Battery	1
6	32093	Lower Housing	1

ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
7	32580	Housing Screw	9
8	29271	Blade Screw	2
9	32561	Charger Stand	1
10	27133	Charger Contact	2
11	29797	Transformer Assembly	1
12	32565	Fiber Base Plate	1
13	S32570	Charger Assy (incls 7,9,10,11,12)	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer.

For best performance, trimmer should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin 53177 U.S.A..

Carefully pack and mail either insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.