



ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	04025	Hair Guard Screw	2
	04654	Gold-tone Hair Guard Screw	2
2	04071	Hair Guard - Outliner (CSA)	1
	04203	Hair Guard - Outliner (UL)	1
	04065	Hair Guard - T-Outliner (UL)	1
	04660	Gold-tone Hair Guard - Outliner (UL)	1
3	04023	Cover Screw	2
	04653	Black Cover Screw	1
4	04085	Switch Decal - (CSA only)	1
5	04602	Grey Upper Cover Assy (UL) (includes items 1 & 2)	1
	04623	Grey Upper Cover Assy (CSA) (includes items 1, 2, & 4)	1
	04646	Black Outliner Upper Cover Assy (UL) (includes items 1&2)	1
6	04229	Terminal Screw (CSA 3-Wire)	1
7	01296	Lockwasher (CSA 3-Wire)	1
8	01031	Switch Pad Screw	2
9	05032	Field Screw	1
10	S04515	Motor Assembly (2 Wire-UL) (includes items 12, 25 & 26)	1
11	S04527	Motor Assembly (3 Wire-CSA) (includes items 12, 25 & 26)	1
12	S04508	Field Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
13	04624	Cord Set (2 Wire-UL)	1
14	04617	Cord Set (3 Wire-CSA)	1
15	05009	Hanger Hook	1
	04662	Gold-tone Hanger Hook	1
16	S04225	Grey Lower Case	1
	04629	Black Outliner Lower Case	1
17	32035	Lower Blade Screw	2
	04663	Gold-tone Lower Blade Screw	2
18	04064	Fiber T-Guide	1
19	15093	T-Guide Washer	1
20	04032	T-Guide Screw	2
	04655	Gold-tone T-Guide Screw	2
21	04022	Field Screw	1
22	04108	Tension Spring Assembly	2
23	32071	New Style Tension Screw (no washer needed)	2
24	29752	Tension Spring Screw	2
25	04532	Armature Spring Assembly (includes item 26)	1
26	03999	Armature Support Screw	1

IMPORTANT INFORMATION!

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U. S. A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.