



ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	18131	Armature Assembly	1
2	18122	Adjusting Screw	1
3	18119	Retainer Mounting Screw	2
4	18120	Cord Retainer	1
5	18132	Cord Set	1
6	18121	Upper Housing Mounting Screw	4
7	18137	Upper Housing (Select Cut)	1
	18138	Upper Housing (Cosmo Pro)	1
8	18118	Armature Mounting Screw	1
9	18129	Adjusting Mounting Screw Cap	1
10	18133	Switch Assembly	1
11	18123	Stabilizer Screw	1
12	18134	Stabilizer Spring	2

ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
13	18135	Lower Housing (UL)	1
	18141	Lower Housing (CSA)	1
14	18115	Blade Bracket	1
15	18114	Adjustment Lever	1
16	18124	Adjustment Lever Screw	1
17	18125	Adjusting Lever Washer	1
18	18126	Mounting Screw	3
19	18127	Lower Blade Screw	2
20	18116	Mounting Plate	1
21	18128	Coil Mounting Screw	2
22	18136	Coil Assembly (UL)	1
	18139	Coil Assembly (CSA)	1
23	18117	Blade Spacer	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of clipper/trimmer. For best performance, clipper/trimmer should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin 53177 U.S.A. Carefully pack and mail either insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.